DURASTRIPE Datasheet / Cleaning / Installation

a quality product from ERGOMAT.

Туре	Material	Glue	Thickness	Hardness	Colors	PMS Code	Color	Width (inches/cm)
					Yellow Red	1225 C 199 C		
SUPREME V	PVC	Rubber based	36 mils (0,91 mm)	95 Shore A	White Blue	PMS White 2945 C		2" - 34"
			(-,		Green	342 C		(5cm - 86cm)
					Orange	165 C		
					Black	Black C		
					Yellow Red	102 C		
					Blue	1795 C 801 C		
					Orange	172 C		
					Black	Black C		
X-TREME	PVC	Rubber	30 mils	98 Shore A	White	PMS White		2" / 3" / 4"
X INLINE		based	(0,76 mm)		Green	347 C		(5cm/7.5cm/10cm)
					Navy Blue	2935 C		
					Purple	266 C		
					Grey	Cool Gray 4 C		
					Brown	4695 C		
					Yellow	116 C		
					Red	186 C		
MEAN LEAN	PVC	Rubber	22 mils	98 Shore A	Navy Blue	2935 C		2" / 3" / 4"
					Orange	179 C		
		based	(0,56 mm)		Black	Black C		(5cm/7.5cm/10cm)
					White	PMS White		
					Green	3415 X		
					Yellow	1235 C		
					Red	1795 C		
LEAN	DVC	A 11 .	30 mils		White	PMS White		2// 24//
LEAN	PVC	Acrylic	(0,76 mm)	95 Shore A	Blue	2728 C		2" - 34"
			(0,70 mm)		Green	347 C		(5cm - 86cm)
					Orange	165 C		
					Black	Black C		
					Yellow	1023 (RAL)		
	Corona-				Red	3020 (RAL)		
MULTIFLEX	treated	Acrylic	38 mils	85 Shore A	White	9003 (RAL)		2" / 3" / 4"
(available in	PVC	Activit	(1,0 mm)	of Shore A	Blue Green	5005 (RAL)		(5cm/7.5cm/10cm)
Europe only)	PVC				Orange	6032 (RAL) 2009 (RAL)		
Larope enily,					Black	9005 (RAL)		
					Black/Yellow	101 C		
HAZARD	PVC	Acrylic	36 mils (0,91 mm)	95 Shore A	Red/White	186 C		2" - 34"
	1.00				Black/White	Black C		(5cm - 86cm)
					Yellow Background	114 C		
INLINE	PVC	Rubber based	38 mils (0,93 mm)	95 Shore A	White Background	PMS White		2" / 3" / 4"
PRINT					Red Background	187 C		(5cm/7.5cm/10cm)

Adhesion: 10=superior	Multiflex	Lean	Supreme	X-Treme	Mean Lean	Deep Freeze	doubt, eets, om . or
New Floors	10	10	10	10	9	10	dou eets, or or
Sealed/Epoxied	7	7	10	9	9	9	any c she at.c ica)
Unsealed Floor	5	5	9	5	6	5	of a pec ma con
Chipped/Gouged	5	6	6	-	-	-	9 5 2 3 5 E
Uneven	6	6	7	-	5	-	: or in cas r product www.erg ergoma t-6628 o. (North A (Europe)
Oily	7	7	8	5	6	9	or in c produ vww.e ergom -6628 (North Europ.
Wet	7	7	6	5	5	9	tails o our p m wr fo@er 374- 6 551 (N
Non-Skid/Textured	-	-	Test	Test	Test	Test	details to our from v info@ 77-374 77-374 1840 (
Heavy Fork Traffic	5	6	7	10	8	7	
Skidding/Pivoting	-	5	5	10	8	6	1 2 0 3 6 9 6
Dragged/Pushed Pallets	5	5	6	8	7	7	For fur blease bbtain bbtain bbtain br call 1-440 -
Freezer	-	-	-	-	-	10	For fun please obtair Email or call or call +457


DURASTRIPE

Datasheet / Cleaning / Installation ERGOMAT.

Installation Step I. Preparation

Note: As with any print and tape installation, it is crucial that the floor be prepared properly, and is as clean and dry as possible.



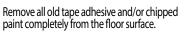



Clean floor surfaces using A CLEANER CONTAINING NO CHLORINE OR CITRUS CLEANERS - Chlorine has a tendancy of leaving a haze on the floor, making it difficult for any adhesive to stick effectively. Citrus cleaners can leave an oily residue that inhibits adhesion.



If you are required to use a degreaser on the floor, please remove / wash off the degreaser prior to applying the DuraStripe.



Allow floor surfaces to dry completely and wait at least 30 minutes before applying the DuraStripe.



Once the floor is dried properly, you may apply DuraStripe Icons, Signage, or Striping where needed.

Proceed to Step II. Applying the DuraStripe

Chemical resistance	Property
Weather	Good
Mineral oils	Variable
Vegetable oils	Good
Cutting oil/Cooling liquid (containing	
compounds of esters and amines)	Good
Alkaline liquids pH: 7 – 9.5	Good
Powerful alkaline liquids pH: 9.5 - 14	Good
Acids pH: $2-7$	Good
Powerful acids pH: 0 – 2	Good
Disinfectants	Good
Alcohol	Good
Chloride solutions	Variable
Solvents (aromatic/aliphatic)	Poor
Halogenated carbon hydrides	Poor
Phthalates (and related softeners)	Poor
Acetate and aldehyde	Poor
Ketones (acetone)	Poor

Warranty

Step II. Applying The DuraStripe

Note: Floor surfaces containing cracks or holes can reduce the lifespan of DuraStripe products. In areas such as high traffic zones, where pallets, skids or other objects have the tendency to scrape or drag on the ground, we recommend using the DuraPux or to score a solid line every foot.



Remove a few centimeters of the protective backing from one end of the DuraStripe.

Using a roller or pressing down on the


with the other hand.

scissors or a utility knife.


Durastripe with one hand, continue to peel

the protective backing from the DuraStripe

To end a line, simple cut the DuraStripe with

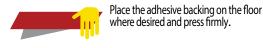



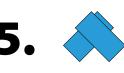

To create mitered corners, allow two pieces of DuraStripe to overlap, with the bottom piece adhered to the floor, and the top piece overlapping with the protective backing in tact.

Complete the miter by cutting both layers together from the inside corner to the outside corner.



To increase DuraStripe products bond to the floor, you may drive something heavy, such as a forklift, over the entire line.



Repeat steps 1-7 as needed to complete your installation.

Cleaning of DuraStripe[®]:

Dirty DuraStripe[®] is cleaned with warm water and DuraStripe Cleaner. DuraStripe[®] does not resist powerful solvents, but resists acids and alkaline liquids.

Removing DuraStripe®:

Possible glue remnant is safely removed with a concentrated citris cleaner

- 1. Add some "Citrus Cleaner" to a cloth and smear it on the glue remnant.
- 2. Brush over the glue remnant with a scrubbing brush.
- 3. The dissolved remnant is easily scraped or wiped with a dry cloth.
- 4. Wash the floor surface with soap or household detergent as necessary to completely remove citrus cleaner before reapplying DuraStripe.

DuraStripe® is conditionally warranted against failure for two years from the date of purchase. Warranty does not cover damage caused by items pushed or dragged across the product, such as skips or pallets or from improper floor cleaning. Warranty claims are limited to replacement of DuraStripe[®]. See our website (www.ergomat.com) for more information.

For more information, visit www.ERGOMAT.com or email us at info@ergomat.com 1-877-374-6628 or 1-440-282-4651 (North America) +45 70 22 18 40 (Europe)